

Load Control Mate (BGWS-04)

The BGWS-04 has two additional alarm inputs that can be configured to your vessel's needs and trigger the load output.

1. Power In

9 - 36 Vdc

2. Ground

Supply Negative = Ground = Boat Chassis

3. Switch In / Reset

Power output from the local switch

4. Load Out

9 - 36 Vdc

15 Amps Max

5. Digital Alarm 1

0 - 36 Vdc

Active-High or Active-Low

6. Digital Alarm 1 Ground

Supply Negative = Ground = Boat Chassis

7. Digital Alarm 2

0 - 36 Vdc

Active-High or Active-Low

8. Digital Alarm 2 Ground

Supply Negative = Ground = Boat Chassis

