

High Water Alarm Sensor (SM-HW)

High Water Alarm Output | Digital Alarm Input

Black = Ground

Supply negative = Ground = Boat Chassis

Red = Power In

9 - 36 Vdc

Use 2 Amp fuse

Yellow = High Water Alarm Output

Connect to alarm light/buzzer

1 Amp Max

Purple = Digital Alarm Input

Active-High or Active-Low

0 - 36 Vdc

