

Tank Level Mate (BGWS-06)

The BGWS-06 Tank Level Mate taps into your existing electronic level gauges.

1. Power In

9 – 36 Vdc

2. Ground

Supply Negative = Ground = Boat Chassis

3. No Connect

4. No Connect

5. Fuel level gauge 1 +

6. Ground

Supply Negative = Ground = Boat Chassis

7. Fuel level gauge 2 +

8. Ground

Supply Negative = Ground = Boat Chassis

